



## ENGLISH

**How to use:**  
**Power on:** Press the fire button 5 times in quick succession to turn it on, the indicator lights will flash 5 times. Press the button in the same way, it will be turned off.

**Soak the ATOPACK coil:** Take out the ATOPACK coil and drip a few drops of e-liquid in it.

**e-Liquid filling:** Inject the e-liquid into the refill filling hole directly. You can refer to the capacity line on the cartridge. Note: Please don't fill too much to avoid overflow.

**Vaping:** Insert the ATOPACK coil into the cartridge. Put the cartridge into the battery. Press the button to inhale, release to exhale.

**ATOPACK coil replacement:** Pull out the cartridge and take out the ATOPACK coil to replace or clean. Note: Please do not wash the atomizer head with water. Simply scrub it with dry cloth.

**Charging:** Simply charge the ATOPACK PENGUIN SE by connecting it with a computer or a wall adapter via USB cable. When it's fully charged, the indicator lights will stay lit for 10 seconds and then go out.

**Functions:**  
**Short circuit protection:**  
 1. Please use correct charging equipment by reputable suppliers.  
 2. When short circuit occurs before working, the indicator light blinks 5 times and the device turns off automatically.

**Atomizer protection:** The ATOPACK PENGUIN SE has a 10 seconds run time protection. The light will flash 10 times if the fire button is pressed for more than 10 seconds.

**Low voltage protection:** When the battery voltage drops lower than 3.3V, the button light will blink 40 times and the device will power off. Simply charge it to turn on.

**Resistance detection:**  
 1. When the resistance at the output end is >3ohm, the indicator light will blink slowly if you press the fire button. When the resistance at the output end is <0.15ohm, the indicator light will blink quickly for 5 times, suggesting the ohm is too low or potential short circuit.

Battery life	Light indication
90%-100%	●●●●●
70%-89%	●●●●○
30%-69%	●●●○○
10-29%	●●○○○
1-9%	●○○○○

**Battery indication:**  
 The indicator light will show the battery life as follows:

**Battery using:**  
 1. Please use correct charging equipment by reputable suppliers.  
 2. Please change good batteries from reputable companies.  
 3. Please put the batteries on a hard surface when charging.  
 4. Please turn off the device when it is not in use.  
 5. Please use dry cloth to clean the battery and its terminals when needed.  
 6. Don't use batteries with torn casings.  
 7. Don't leave the charging batteries unattended.  
 8. Don't expose the battery to extreme heat, cold or direct sunlight.  
 9. Keep away from water or any liquids.

**Precautions:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Warning:**  
 1. Keep out of reach of children.  
 2. This device is not recommended for use by people under 18 or non-smokers.  
 3. This device is not suitable for use by pregnant or breast-feeding women.  
 4. This device is not suitable for use by people who are allergic or sensitive to nicotine or those who carry use nicotine products for health reasons.  
 5. This device is not suitable for use by people who have cardiovascular or respiratory diseases.  
 6. This device is not suitable for use by people who diseases like cardiac dysfunction, high blood pressure or diabetes.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

## FRENCH

**Utilisation:**  
**Mise sous / hors tension:** Appuyez cinq fois sur le bouton de tir pour le mettre sous tension, les voyants clignotent 5 fois. Appuyez sur le bouton de tir de la même manière, il s'éteint.

**Imbibir la résistance de l'ATOPACK:** Sortez la bobine ATOPACK et gouttez quelques gouttes d'e-liquide.

**Remplissage e-liquide:** Injectez le e-liquide dans la fente de remplissage directement. Vous pouvez vous référer à la ligne Max sur le réservoir. Remarque: ne pas trop remplir pour éviter les débordements.

**Vaper:** Insérez la résistance ATOPACK dans la cartouche. Placez la cartouche dans la batterie. Appuyez sur le bouton pour inhaler, relâchez pour exhaler.

**Remplacement de la résistance ATOPACK:** Retirez la cartouche et retirez la résistance ATOPACK pour la remplacer ou la nettoyer. (Remarque: Ne lavez pas la tête de l'atomiseur avec de l'eau. Il suffit de la frotter avec un chiffon propre et sec.)

**Charge:** Il suffit de charger l'ATOPACK PENGUIN SE en le connectant à un ordinateur ou à un adaptateur mural via un câble USB. Quand il est complètement chargé, les voyants s'allument pendant 10 secondes et s'éteignent.

**Quand:**  
**Short circuit protection:**  
 1. L'usage d'un court-circuit se produit avant le fonctionnement, le voyant clignote 5 fois et l'appareil s'éteint.  
 2. En cas de court-circuit en cours de fonctionnement, le voyant clignote 5 fois et le sortie se coupe automatiquement.

**Protection de la résistance:** ATOPACK PENGUIN SE dispose d'une protection de 10 secondes. Le témoin clignote 10 fois si le bouton de tir est enfoncé pendant plus de 10 secondes.

**Protection basse tension:** Lorsque la tension de la batterie tombe en dessous de 3,3 V, la lumière du bouton clignote 40 fois et l'appareil s'éteint. Il suffit de charger pour allumer.

**Détection de résistance:**  
 1. Lorsque la résistance de sortie est >3ohm, le voyant clignote lentement si vous appuyez sur le bouton de tir.  
 2. Lorsque la résistance de sortie est <0,15 ohm, le voyant clignote rapidement pendant 5 fois, ce qui suggère que l'ohm est trop faible ou un court-circuit potentiel.

Capacité de la batterie	Indicateur LED
90%-100%	●●●●●
70%-89%	●●●●○
30%-69%	●●●○○
10-29%	●●○○○
1-9%	●○○○○

**Indication de la batterie:**  
 Le témoin lumineux indique la durée de vie de la batterie comme suit:

**Utilisation de la batterie:**  
 1. Utilisez toujours l'appareil avec le chargeur correct par des fournisseurs réputés.  
 2. Si l'un ou plusieurs des piles avec des boîtiers détachés.  
 3. Veuillez mettre les piles sur une surface dure pendant le chargement.

4. Veuillez étendre l'appareil lorsqu'il n'est pas utilisé.  
 5. Utilisez un chiffon sec pour nettoyer la batterie et ses bornes si nécessaire.  
 6. Ne pas utiliser de piles avec des boîtiers détachés.  
 7. Ne laissez pas les batteries de charge sans surveillance.  
 8. Ne laissez pas la batterie à une chaleur extrême, à la lumière directe du soleil ou à l'ombre.  
 9. Consentez à l'écart du feu ou de tout liquide.

**Précautions:**  
 1. N'utilisez pas l'appareil en cas de tempête ou de poussière.  
 2. Connectez correctement le port USB et le chargeur. Débranchez le chargeur lorsque la charge est terminée.  
 3. Cet appareil ne convient pas aux femmes enceintes ou qui allaitent.  
 4. Cet appareil ne convient pas aux personnes allergiques ou sensibles à la nicotine ou à celles qui ne peuvent pas utiliser des produits de la nicotine pour des raisons de santé.  
 5. Le chargeur et la batterie peuvent chauffer lors de la charge. Lenz à l'écart des gaz inflammables, des liquides ou d'autres matériaux.  
 6. Cet appareil n'est pas adapté pour une utilisation par des personnes qui ont des maladies comme le dysfonctionnement cardiaque, l'hypertension artérielle ou le diabète.

**Attention:**  
 1. Tenir hors de la portée des enfants.  
 2. Cet appareil n'est pas recommandé pour les personnes de moins de 18 ans ou les non-fumeurs.  
 3. Cet appareil ne convient pas aux femmes enceintes ou qui allaitent.  
 4. Cet appareil ne convient pas aux personnes allergiques ou sensibles à la nicotine ou à celles qui ne peuvent pas utiliser des produits de la nicotine pour des raisons de santé.  
 5. Le chargeur et la batterie peuvent chauffer lors de la charge. Lenz à l'écart des gaz inflammables, des liquides ou d'autres matériaux.  
 6. Cet appareil n'est pas adapté pour une utilisation par des personnes qui ont des maladies comme le dysfonctionnement cardiaque, l'hypertension artérielle ou le diabète.

**Precautions:**  
 1. Faltés réparer votre appareil uniquement par Joyetech. N'essayez pas de réparer l'appareil vous-même, car des dommages ou des blessures peuvent se produire.  
 2. Ne laissez pas l'appareil dans des conditions de températures ou d'humidité élevées, car cela pourrait endommager l'appareil. La température de fonctionnement appropriée est de 0 ° C à 45 ° C pendant la charge et 10 ° C en cours d'utilisation.  
 3. N'essayez pas de combiner le dispositif avec des parties d'autres marques d'e-cigarettes. Joyetech n'assume aucune responsabilité et votre garantie sera annulée en cas de dommages causés de cette manière.

**Attention:**  
 1. Faltés réparer votre appareil uniquement par Joyetech. N'essayez pas de réparer l'appareil vous-même, car des dommages ou des blessures peuvent se produire.  
 2. Ne laissez pas l'appareil dans des conditions de températures ou d'humidité élevées, car cela pourrait endommager l'appareil. La température de fonctionnement appropriée est de 0 ° C à 45 ° C pendant la charge et 10 ° C en cours d'utilisation.  
 3. N'essayez pas de combiner le dispositif avec des parties d'autres marques d'e-cigarettes. Joyetech n'assume aucune responsabilité et votre garantie sera annulée en cas de dommages causés de cette manière.

**Precautions:**  
 1. Faltés réparer votre appareil uniquement par Joyetech. N'essayez pas de réparer l'appareil vous-même, car des dommages ou des blessures peuvent se produire.  
 2. Ne laissez pas l'appareil dans des conditions de températures ou d'humidité élevées, car cela pourrait endommager l'appareil. La température de fonctionnement appropriée est de 0 ° C à 45 ° C pendant la charge et 10 ° C en cours d'utilisation.  
 3. N'essayez pas de combiner le dispositif avec des parties d'autres marques d'e-cigarettes. Joyetech n'assume aucune responsabilité et votre garantie sera annulée en cas de dommages causés de cette manière.

**Precautions:**  
 1. Faltés réparer votre appareil uniquement par Joyetech. N'essayez pas de réparer l'appareil vous-même, car des dommages ou des blessures peuvent se produire.  
 2. Ne laissez pas l'appareil dans des conditions de températures ou d'humidité élevées, car cela pourrait endommager l'appareil. La température de fonctionnement appropriée est de 0 ° C à 45 ° C pendant la charge et 10 ° C en cours d'utilisation.  
 3. N'essayez pas de combiner le dispositif avec des parties d'autres marques d'e-cigarettes. Joyetech n'assume aucune responsabilité et votre garantie sera annulée en cas de dommages causés de cette manière.

**Precautions:**  
 1. Faltés réparer votre appareil uniquement par Joyetech. N'essayez pas de réparer l'appareil vous-même, car des dommages ou des blessures peuvent se produire.  
 2. Ne laissez pas l'appareil dans des conditions de températures ou d'humidité élevées, car cela pourrait endommager l'appareil. La température de fonctionnement appropriée est de 0 ° C à 45 ° C pendant la charge et 10 ° C en cours d'utilisation.  
 3. N'essayez pas de combiner le dispositif avec des parties d'autres marques d'e-cigarettes. Joyetech n'assume aucune responsabilité et votre garantie sera annulée en cas de dommages causés de cette manière.

**Precautions:**  
 1. Faltés réparer votre appareil uniquement par Joyetech. N'essayez pas de réparer l'appareil vous-même, car des dommages ou des blessures peuvent se produire.  
 2. Ne laissez pas l'appareil dans des conditions de températures ou d'humidité élevées, car cela pourrait endommager l'appareil. La température de fonctionnement appropriée est de 0 ° C à 45 ° C pendant la charge et 10 ° C en cours d'utilisation.  
 3. N'essayez pas de combiner le dispositif avec des parties d'autres marques d'e-cigarettes. Joyetech n'assume aucune responsabilité et votre garantie sera annulée en cas de dommages causés de cette manière.

## GERMAN

**Gebrauchsanleitung:**  
**Ein- und Ausschalten:** Drücken Sie die Feueraste 5 mal schnell hintereinander, die Taste wird 5 mal und signalisiert somit die Einschaltbereitschaft. Auf die gleiche Weise können Sie das Gerät auch wieder ausschalten.

**ATOPACK-Spule einweichen:** Nehmen Sie die ATOPACK-Spule heraus und tauschen Sie ein paar Tropfen E-Flüssigkeit aus.

**Befüllen mit e-Liquid:** Befüllen Sie das e-Liquid direkt in das e-Liquid-Einloch. Beachten Sie die Markierung am Tank. Hinweis: Bitte nicht über die Markierung füllen, ansonsten kann der Tank auslaufen.

**Vaping:** Insert the ATOPACK Spule in den Tank stecken. Den Tank auf den Akku stecken und einfach die Feueraste drücken und inhalieren oder paffen. Taste koppsen und ausatmen.

**ATOPACK Verdampferkopf austauschen:** Ziehen Sie den Tank vom Akku aus und nehmen die ATOPACK-Spule heraus. Um sie zu ersetzen oder zu reinigen. (Hinweis: Bitte reinigen Sie den Verdampferkopf nicht mit Wasser. Schrubben Sie einfach mit einem sauberen, trockenen Tuch.)

**Laden:** Laden Sie einfach den ATOPACK PENGUIN SE, indem Sie ihn mit einem Computer oder einem Wandadapter über ein USB-Kabel verbinden. Wenn es voll aufgeladen ist, leuchten die Kontrollleuchten 10 Sekunden lang auf und gehen dann aus.

**Aufmerksamkeit:**  
**Short circuit protection:**  
 1. Please use correct charging equipment by reputable suppliers.  
 2. When short circuit occurs before working, the indicator light blinks 5 times and the device turns off automatically.

**Atomizer protection:** The ATOPACK PENGUIN SE has a 10 seconds run time protection. The light will flash 10 times if the fire button is pressed for more than 10 seconds.

**Low voltage protection:** When the battery voltage drops lower than 3.3V, the button light will blink 40 times and the device will power off. Simply charge it to turn on.

**Resistance detection:**  
 1. When the resistance at the output end is >3ohm, the indicator light will blink slowly if you press the fire button. When the resistance at the output end is <0.15ohm, the indicator light will blink quickly for 5 times, suggesting the ohm is too low or potential short circuit.

Battery life	Light indication
90%-100%	●●●●●
70%-89%	●●●●○
30%-69%	●●●○○
10-29%	●●○○○
1-9%	●○○○○

**Battery indication:**  
 The indicator light will show the battery life as follows:

**Battery using:**  
 1. Please use correct charging equipment by reputable suppliers.  
 2. Please change good batteries from reputable companies.  
 3. Please put the batteries on a hard surface when charging.  
 4. Please turn off the device when it is not in use.  
 5. Please use dry cloth to clean the battery and its terminals when needed.  
 6. Don't use batteries with torn casings.  
 7. Don't leave the charging batteries unattended.  
 8. Don't expose the battery to extreme heat, cold or direct sunlight.  
 9. Keep away from water or any liquids.

**Precautions:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

**Attention:**  
 1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.  
 2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and 10℃ to 60℃ while in use.  
 3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

una salida baja o un cortocircuito potencial.

**Indicación de la batería:**  
 La luz indicadora mostrará la duración de la batería de la siguiente manera:

**Uso de la batería:**  
 1. Por favor, utilice el cargador correcto de proveedores de confianza.  
 2. Por favor, seleccione buenas baterías de empresas de renombre.  
 3. Por favor, ponga las pilas en una superficie firme durante la carga.  
 4. Por favor, asegure el dispositivo cuando no está en uso.  
 5. Por favor, utilice un paño seco para limpiar la batería y sus terminales cuando sea necesario.  
 6. No utilice baterías con las cubiertas rotas.  
 7. No deje las baterías durante la carga sin vigilancia.  
 8. No exponga la batería a altas temperaturas o bajo la luz solar directa.  
 9. Mantenga la batería lejos del agua o cualquier líquido.

**Precauciones:**  
 1. No utilice el dispositivo en tiempo tormentoso o en condiciones extremas de polvo.  
 2. Conecte el puerto USB y el cargador correctamente. Desenchufe el cargador cuando se haya completado la carga.  
 3. No ponga el dispositivo en el bolsillo o en el bolso directamente. No lo mezcle con monedas, joyas u otros objetos duros.  
 4. Utilice el cargador recomendado con la corriente de carga de 5V / 1A.  
 5. El cargador y la batería pueden calentarse durante la carga, manténgalos alejados de gases, líquidos u otros materiales.

**Precauciones:**  
 1. Non utilizzare il dispositivo in caso di maltempo o in presenza di polvere.  
 2. Collegare la porta USB e il caricatore correttamente. Disconnettere il caricatore quando si è completata la carica.  
 3. Non mettere il dispositivo in tasca o in borsa direttamente. Non mescolarlo con monete, gioielli o altri oggetti duri.  
 4. Utilizzare il caricatore consigliato con la corrente di carica di 5V / 1A.  
 5. Il caricatore e la batteria possono riscaldarsi durante la carica, tenere lontano da gas infiammabili, liquidi o altri materiali.

**Precautions:**  
 1. Non utilizzare il dispositivo in caso di maltempo o in presenza di polvere.  
 2. Collegare la porta USB e il caricatore correttamente. Disconnettere il caricatore quando si è completata la carica.  
 3. Non mettere il dispositivo in tasca o in borsa direttamente. Non mescolarlo con monete, gioielli o altri oggetti duri.  
 4. Utilizzare il caricatore consigliato con la corrente di carica di 5V / 1A.  
 5. Il caricatore e la batteria possono riscaldarsi durante la carica, manténgalos alejados de gases, líquidos u otros materiales.

**Precautions:**  
 1. Non utilizzare il dispositivo in caso di maltempo o in presenza di polvere.  
 2. Collegare la porta USB e il caricatore correttamente. Disconnettere il caricatore quando si è completata la carica.  
 3. Non mettere il dispositivo in tasca o in borsa direttamente. Non mescolarlo con monete, gioielli o altri oggetti duri.  
 4. Utilizzare il caricatore consigliato con la corrente di carica di 5V / 1A.  
 5. Il caricatore e la batteria possono riscaldarsi durante la carica, tenere lontano da gas infiammabili, liquidi o altri materiali.

**Precautions:**  
 1. Non utilizzare il dispositivo in caso di maltempo o in presenza di polvere.  
 2. Collegare la porta USB e il caricatore correttamente. Disconnettere il caricatore quando si è completata la carica.  
 3. Non mettere il dispositivo in tasca o in borsa direttamente. Non mescolarlo con monete, gioielli o altri oggetti duri.  
 4. Utilizzare il caricatore consigliato con la corrente di carica di 5V / 1A.  
 5. Il caricatore e la batteria possono riscaldarsi durante la carica, tenere lontano da gas infiammabili, liquidi o altri materiali.

**Precautions:**  
 1. Non utilizzare il dispositivo in caso di maltempo o in presenza di polvere.  
 2. Collegare la porta USB e il caricatore correttamente. Disconnettere il caricatore quando si è completata la carica.  
 3. Non mettere il dispositivo in tasca o in borsa direttamente. Non mescolarlo con monete, gioielli o altri oggetti duri.  
 4. Utilizzare il caricatore consigliato con la corrente di carica di 5V / 1A.  
 5. Il caricatore e la batteria possono riscaldarsi durante la carica, tenere lontano da gas infiammabili, liquidi o altri materiali.

**Precautions:**  
 1. Non utilizzare il dispositivo in caso di maltempo