

<p>Notice for Use: Thank you for choosing a Joyetech product! Please read this manual carefully to ensure proper use. For additional information or questions regarding the product or its use, please consult your local Joyetech retailer, or visit our website at www.joyetech.com.</p> <p>Product Introduction: The eVic-VT 60W, 5000mah is a uniquely different vaping product, with the new cutting edge technology of temperature control, promoting the concept of a healthier alternative lifestyle with safer vaping. The eVic-VT combines unique and attractive styling with a super large OLED screen, and supports VT-Ti (Titanium), VT-Ni (Nickel 200), and VW(Variable Wattage) modes. Variable Temperature (VT) brings a new flavor experience with every change of temperature setting, not only offering improvements in taste, but also prolonging the battery performance. The eVic-VT is not just another box mod, it's the start of a new evolution.</p> <p>Specification Size: 47*25.5*85.6mm Capacity: 5000mAh Output mode: VT-Ti/VT-Ni/VW Mode Output Wattage: 1-60w Resistance Range: 0.05-1.0ohm for VT mode 0.15-3.5ohm for VW mode Temperature Range: 100—315℃/200—600℉</p>	<p>How to use: 1, Power on/off: Press the fire button 5 times in quick succession to turn the device on. Press the fire button 5 times in quick succession to turn the device off.</p> <p>2, Vaping: Hold the fire button and inhale through the mouthpiece. Release the Fire button and exhale.</p> <p>3, Stealth function: While the device is on, simultaneously hold the fire button and turn the control knob to the left. This will switch between Stealth on and Stealth off function. In Stealth on Mode, you can vape with the OLED screen off. To quickly see your settings in stealth on mode, you can tap the fire button to display the settings.</p> <p>4, Adjustment Lock function: While the device is on, simultaneously press the fire button and turn the control knob to the right. This will switch between Adjustment Lock and Adjustment Unlock function. In Adjustment Lock mode, the control knob will not function to prevent accidental VT/VW setting adjustments.</p>
<p>1 eVic VT English</p>	<p>English eVic VT 2</p>

<p>Shift Between VT-Ni/VT-Ti/VW Mode: 1, Press the fire button 3 times to enter the menu. The OLED screen presents 4 rows of information: (1)Temp Ni (VT-Ni), Temp Ti (VT-Ti) and Power (VW) (2)In Temp Mode this row displays output power (W). In Power Mode, it will display output voltage (V). (3)Atomizer Resistance. In VT Mode this will also display the Resistance Lock. (4)User information (battery indicator, total vapor puffs and vaping time) 2, After pressing the fire button 3 times, the first row will flash to indicate you entered into the menu. Turn the control knob to the right to switch between VT-Ni, VT-Ti, and VW modes. Press the fire button, or leave the display to flash 10 times on the current setting to confirm and exit the menu.</p> <p>VT-Ni and VT-Ti Mode: In VT mode, coil temperature can be adjusted (from 100-315℃ or 200-600℉) with the control knob. Turning it to the right will increase temperature, turning to the left will decrease temperature. A momentary turn of the control knob will increase or decrease the temperature by increments of 5℃ or 10℉. Holding the control knob to the right or left will rapidly increase or decrease the temperature setting.</p>	<p>Supplementary VT Mode Function: 1, Lock/unlock the atomizer resistance in VT mode: Press the fire button three times and enter into the menu. Turn the control knob to the left side 2 times, and the third row will blink. Turn the control knob to the right to lock or unlock the resistance of the atomizer. When the lock sign is displayed, it indicates the resistance is locked.</p> <p>Note: Please lock the resistance only when the coil is at room temperature. This will lock the correct "base resistance" of the atomizer. Temperature control will remain accurate, as long as the coil is not changed. Once the resistance is locked, you can remove the tank when the coils are hot or cold and it will function under the same parameter. Please unlock the resistance before you change to a different atomizer or the VT system will not work correctly. In Resistance Unlock mode, please ensure any new coil is at room temperature when first used to retain temperature accuracy.</p> <p>2. New atomizer coil installation: When replacing the atomizer, whose atomizer resistance is larger than the previous one on some degree, resetting of the atomizer "base resistance" may be required – this is the resistance of the atomizer coil when it is at room temperature. After fitting a new atomizer coil, press the power button while the tank is removed to initiate a</p>
<p>3 eVic VT English</p>	<p>English eVic VT 4</p>

<p>reset. After you reinstall the tank, a message "New Coil Right, Same Coil Left" will appear on the display. Turn the control knob to the right to confirm that a new coil has been fitted.</p> <p>Should you see this message for any other reason – especially when reinstalling the same coil that is still warm from recent use – turn the control knob to the left so that the "base resistance" is not reset. Always remember to change the operational mode to suit the coil material that you have fitted to ensure that temperature control is accurate.</p> <p>3. Wattage Adjustment in VT mode: Maximum initial wattage can be adjusted in VT mode. Press the fire button 3 times to enter the menu. Turn the control knob to the left, and the second row will blink. Then turn the control knob to the right to adjust the wattage, and press fire button to confirm.</p> <p>Note: (1). The ideal output wattage in VT mode should be 30-60W, because when the output wattage is below 30W, it is difficult to reach 450℉ (230℃) so that vaporization will start. (2).VT mode only supports a maximum of 1.0 ohm. The device will automatically switch to VW mode when the resistance is larger than 1.0 ohm. (3). In VT mode, when the resistance is 0.05~0.1ohm, the maximum output will be limited to be 50W to ensure safe operation.</p>	<p>VW mode: In VW mode output wattage can be adjusted from 1W to 50W by turning the control knob, right to increase, and left to decrease. Holding the control knob to the right or left will make the wattage setting rapidly increase or decrease. Note: For Kanthal Wire whose resistance range is 0.25-1.0 ohm, the output wattage can reach to 60W. For Kanthal Wire whose resistance range is 0.15-0.24ohm, the actual output wattage can reach to 50W~55W.</p> <p>Shift between Battery Charge, Vapor Time and Puff Counter: Press the fire button three times to enter the menu. Turn the control knob to the left 3 times, and the fourth row will blink. Now turn the control knob to the right to shift between Battery Charge remaining(%), Vapor Time(seconds) and Puff Counter display. To reset the Vapor Time or Puff Counter records, please hold down the fire button, while the Time or Puff mode is still flashing.</p> <p>Tips for Using VT Atomizer Head 1. When using a new VT atomizer head, please drip a few drops of e-juice in the cotton of atomizer head to ensure it is moist before the first use to reach the best performance. 2. If the atomizer has been kept one day without use after filling with e-juice, there may be crackles when firing, which is normal.</p>
<p>5 eVic VT English</p>	<p>English eVic VT 6</p>

<p>3. If redundant e-juice piles up around the coil, then sometimes the coil cannot reach protection temperature when in use. Please press the fire button and blow out redundant e-juice through airflow holes if this issue occurs. 4. To protect the cotton from burning, please do not vape when the device is out of e-juice.</p> <p>Malfunction Indication and Protection Over 10 Second Protection: When the power button is pressed for over 10 seconds, the output will shut off and the OLED Screen will display "Over 10s protection".</p> <p>Atomizer Short-circuit Protection: When atomizer short-circuit occurs, the OLED Screen will display "Atomizer Short".</p> <p>Low power Alert: When the voltage of battery is below 3.3V, the device shows: Battery Low. If you continue to press the fire button, the device shows: Battery low lock, and cannot work. Please recharge the battery to reactivate.</p> <p>Unlocking Battery Low: As soon as charging has commenced low-voltage protection will be unlocked.</p>	<p>Temperature Protection: In VT mode, if the actual temperature of coil is higher than the set temperature, the device shows: "Protection".</p> <p>Temperature Alert: If the temperature of device is over 70℃, the output will shut off automatically and the screen will display "Device Too Hot".</p> <p>Atomizer Head Replacement Unscrew the atomizer base from the tank. Unscrew the atomizer head and remove from the atomizer base. Screw the new CL atomizer head into the atomizer base and firmly tighten. Refit the atomizer base into the tank. Connect the assembled atomizer to the battery and the eVic-VT is ready to use.</p> <p>Charging the battery If the battery charge indicator is selected on the fourth row, the remaining battery charge is indicated on the OLED Screen. The battery charge indicator will flash when the remaining charge is below 10%. The battery can be recharged using the supplied USB cable. It takes approximately 6 hours to fully charge the device with a 1AMP wall adapter.</p>
<p>7 eVic VT English</p>	<p>English eVic VT 8</p>

<p>Precautions 1. Only have your eVic VT repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur. 2. Do not leave the eVic VT in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0℃ to 45℃ while charging and -10℃ to 60℃ while in use. 3. Do not attempt to combine the eVic VT with parts from other brands of e-cigarettes. OIf it is damaged in this way, Joyetech will not take responsibility and your warranty will be void. 4. eVic-VT has some characteristic sounds in operation. These sounds are very low in volume, and can typically only be detected by holding the device close to the ear. eVic-VT boost circuit inductor emits a continuous high-frequency buzz, and the switching system that detects atomizer resistance produces an intermittent ticking noise rather like that of a quartz watch. These noises are normal, and should not cause concern in any device that is otherwise functioning normally. When the device goes into standby after a period of 3 minutes without use, or if the power button is pressed 5 times, all such noises will immediately cease.</p> <p>Warranty terms Please consult your Joyetech product warranty card. We are not responsible for any damage caused by user error. Our warranty is not valid for products purchased from third party vendors. Joyetech agrees to provide repair under warranty pursuant to the following terms and conditions:</p>	<p>1. This warranty provides repair free of charge for defective Joyetech brand merchandise. Warranty period is 90 days from date of purchase by the end user. 2. This warranty may be void as a result of any of the following conditions: * Customer does not provide warranty card and original receipt of purchase. * Merchandise failure or damage is caused due to improper use or unauthorized repair. * Merchandise failure or damage as a result of excessive force such as dropping. * Merchandise failure or damage as a result of usage outside of recommended operating conditions (see precautions in usage manual). * Merchandise failure or damage caused by improper use of water or other liquid (see usage manual for operating instructions). * Merchandise failure or damage due to usage with non-Joyetech components (charger, battery, and power cable). 3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, cartridge, atomizer head, lanyard, and leather sheath. 4. This warranty does not cover any non-Joyetech brand products. This warranty is only valid for eligible Joyetech brand products during the warranty period of 90 days after date of purchase as indicated on proof of purchase.</p> <p>Joyetech reserves the right of final decision in all warranty cases. Joyetech may interpret and revise the content of this warranty terms.</p>
<p>9 eVic VT English</p>	<p>English eVic VT 10</p>