

HOW TO UPGRADE YOUR ELITAR PIPE (FOR MAC)

1. First, download and install “UpdateFirmware.pkg” file.



Latest Version: (VT Software1.20)

Firmware V1.01



2. Double click the Update Firmware to open the file, and it will show:




3. Connect your device to your PC with the USB cable provided. It will show the current information of the Elitar, Firmware version and Hardware version.


4. Go to your applications and click on the UpdateFirmware icon to open it




5. Click update where it will take you to the hex folder. Click on “Elitar_Pipe_V1.01.bin”

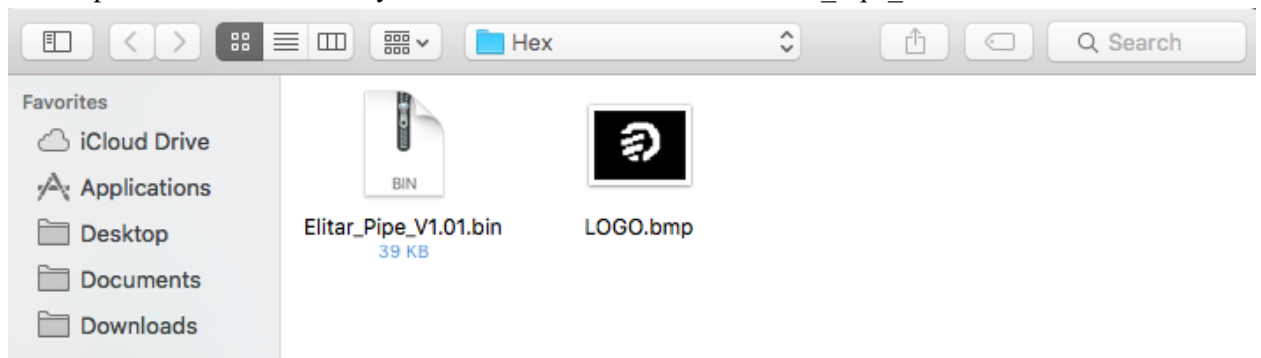

6. Next, you will see an alert message notifying you the firmware update is complete.

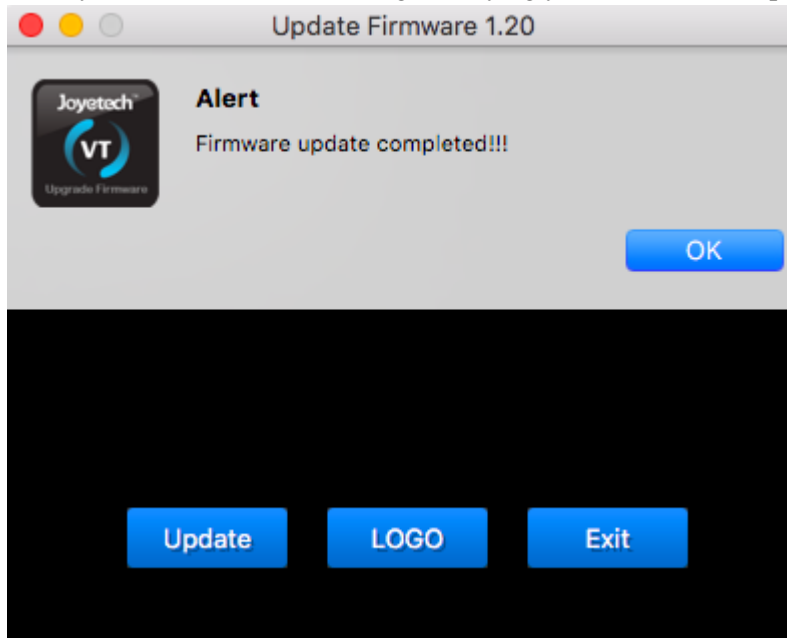

7. Click "OK" and the current firmware version will display 1.01.

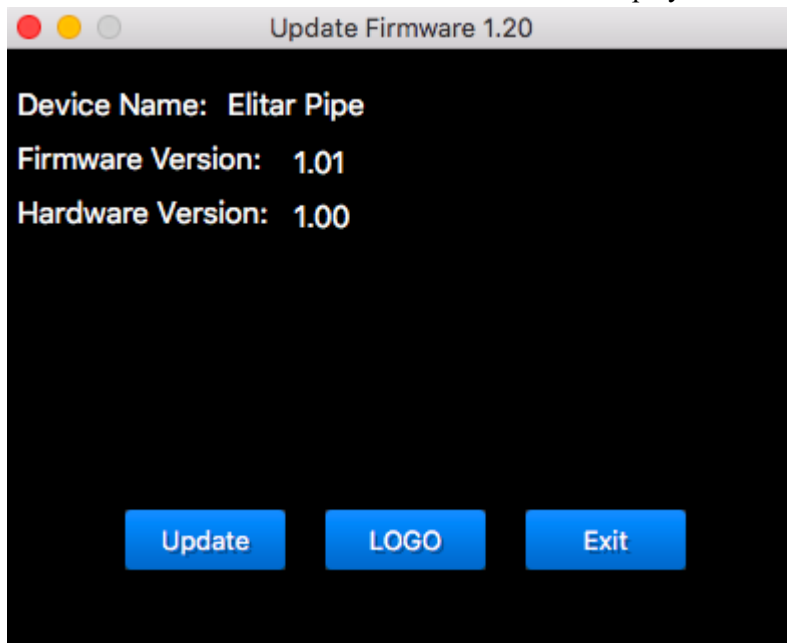

Note:

- 1) If the blank screen appears while upgrading, please restart the upgrade or press “-” button to go back.
- 2) If you get stuck while upgrading, please try: taking off the cell and atomizer first and then start the upgrade process.

If this still doesn't work, please try:

- 1) Connecting the USB cable to your PC first and start the upgrade program (VT software);
- 2) Keep pressing the “+” button, and then plug into the USB port;
- 3) Start the upgrade process.