



# HOW TO UPGRADE YOUR ELITAR PIPE (FOR WINDOWS)


- 1, Download the Update software and UpdateFirmware, storing both files under a same root.

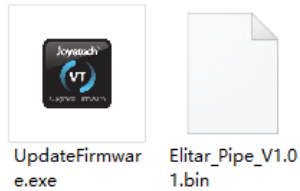


- 2, Double click the UpdateFirmware to start, and it shows as follows:

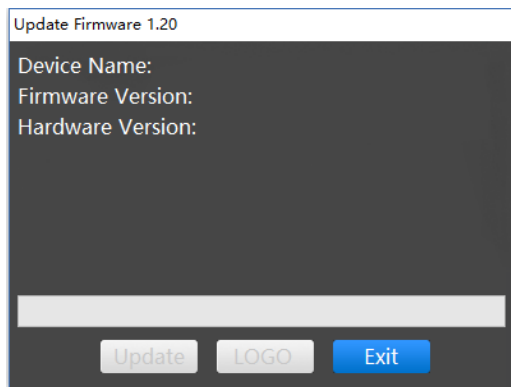


- 3, Connecting your device to the computer via USB cable. The Update icon will turn into blue.

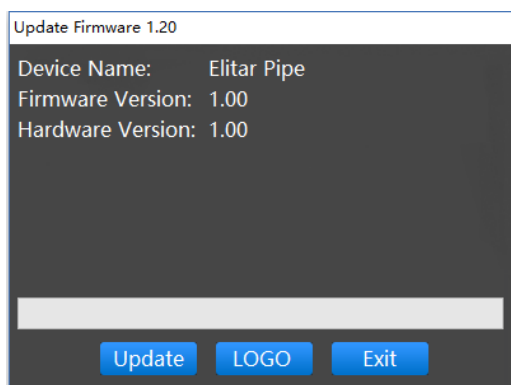


- 4, Click the Update icon, choose the file (Elitar\_Pipe\_V1.01.bin) to upgrade.

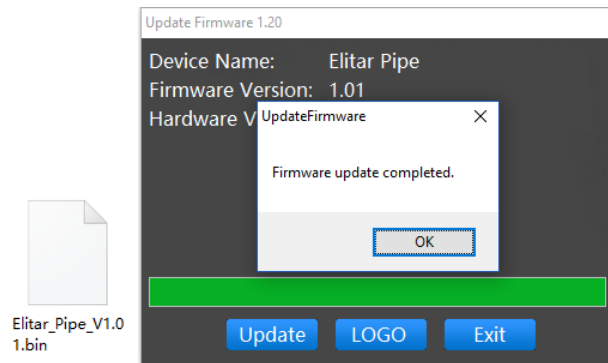


- 5, Please click Confirm after firmware update completed.

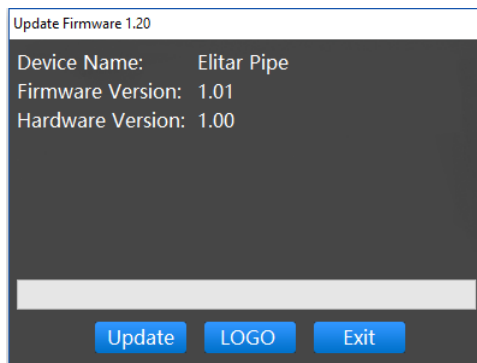

- 6, Click the logo icon, choose the custom logos you've prepared. Attention, all the logos shall be single color bmp. picture with limited 64\*48 pixel.

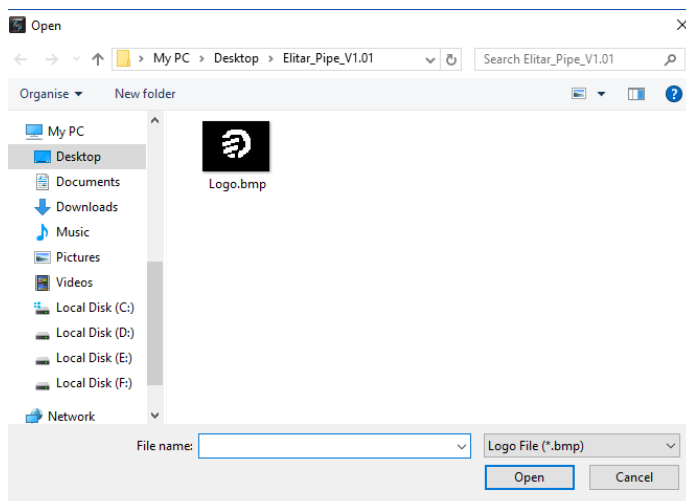

- 7, Click OK to complete. Press exit to disconnect.

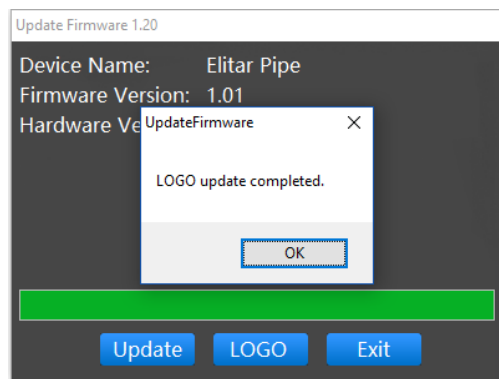

Note :

1) Should you encounter blank screen while upgrading, please restart the upgrade or press “-” button to go back.

2) Should you get stuck while upgrading, please try: taking off the cell and atomizer first and then restart the upgrade process.

If it still doesn't work, kindly please try:

- 1, connect the USB cable to your PC first and start the upgrade program (VT software);
- 2, keep pressing the “+” button, and then plug to the USB port;
- 3, start the upgrade process.